




JEEP GRAND CHEROKEE FRONT DRIVESHAFT MEASUREMENT


BEFORE GETTING YOUR MEASUREMENT:

1. REMOVE OEM DRIVESHAFT
2. VERIFY WHAT STYLE SHAFT YOU HAVE
3. VERIFY THE YEAR, ENGINE, AND ANY SUSPENSION MODIFICATION
4. ENSURE JEEP IS AT RIDE HEIGHT, WEIGHT ON SUSPENSION


WITH YOUR JEEP AT RIDE HEIGHT, MEASURE BETWEEN THE MOUNTING SURFACES (NOT THE LIP) OF THE FLANGES. CONVERSION KITS REPLACE STOCK RZEPPA FLANGES WITH STRONGER YOKES, OEM REPLACEMENT SHAFTS ARE A DIRECT BOLT IN. SEE THE BOTTOM OF THE PAGE TO MEASURE FOR OEM REPLACEMENT.

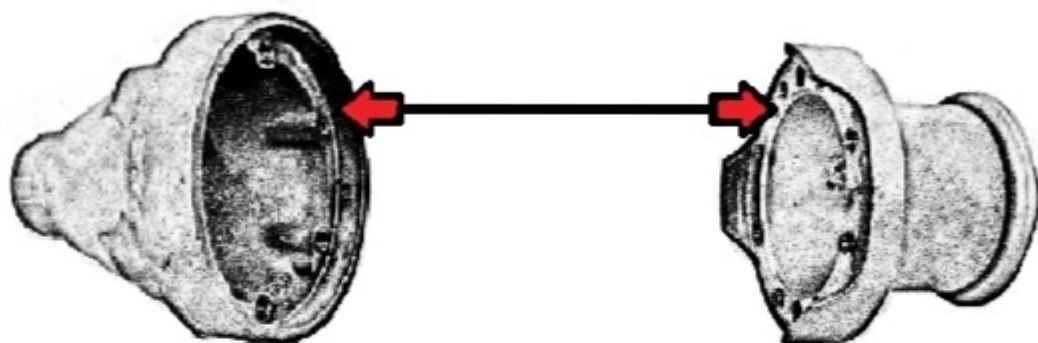


RZEPPA X RZEPPA

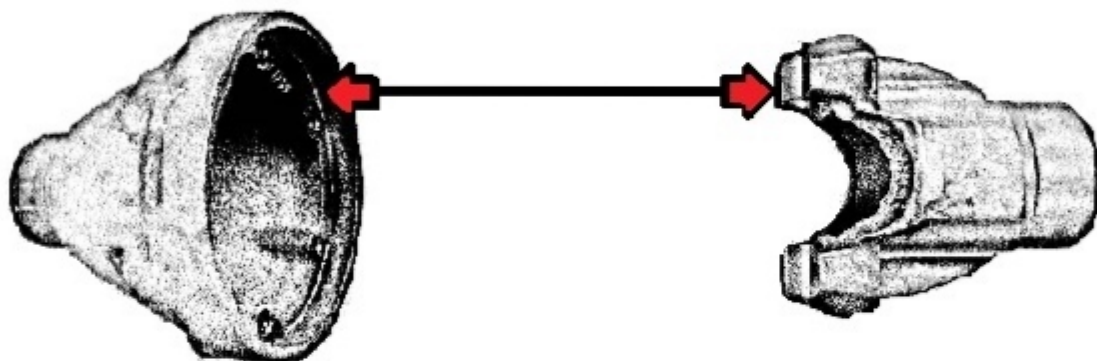

RZEPPA X 1310 CV DOUBLE CARDON

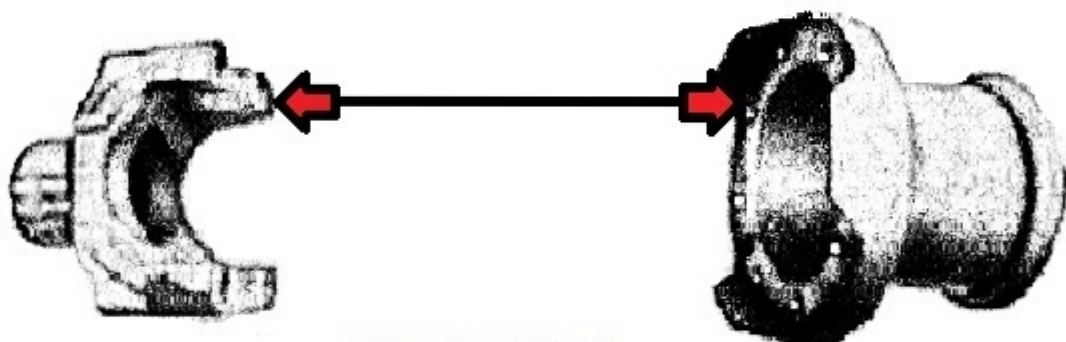

1310 X RZEPPA

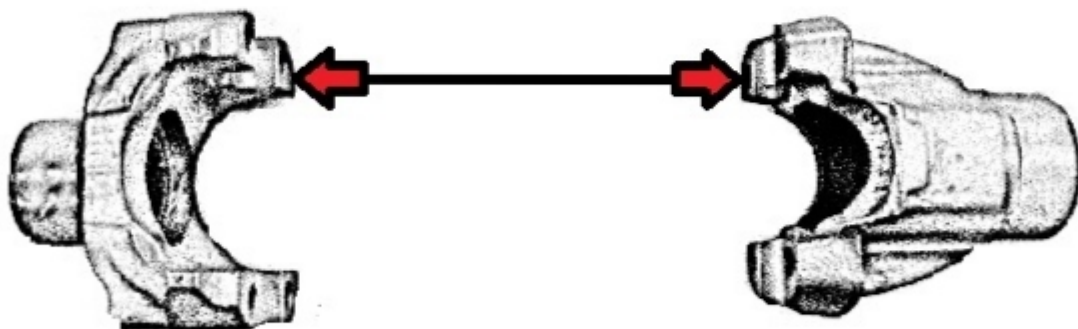

1310 X 1310 CV DOUBLE CARDON

WHEN MEASURING FOR OUR OEM REPLACEMENT:

1. REMOVE DRIVESHAFT FROM VEHICLE
2. VERIFY STYLE OF DRIVESHAFT
3. VERIFY YEAR AND ENGINE
4. TAKE YOUR MEASUREMENT



MEASURE BETWEEN THE RINGS ON EACH END OF THE TUBE. ** SOME SHAFTS WILL LOOK DIFFERENT.**